PRODUCT DESCRIPTION: Headlight APPLICATION: 2005-2011 Toyota Tacoma



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION Improper installation may void warranty.



TOOLS NEEDED: 10mm Socket, Panel Popper

STEP 1



Stock Toyota Tacoma

STEP 2



Open hood and disconnect negative battery cable.

STEP 3



Remove 2 push tabs on top edge of grill.

STEP 4



Remove two 10mm bolts from top of grill.

STEP 5



Pull up on radiator grill to pop out then remove and set grill aside.

STEP 6



Remove push pin on headlight trim. Repeat on other side.

STEP 7



Use panel popper under headlight trim to release tab and remove trim. Repeat on other side.

STEP 8



Remove 3 push tabs from top of bumper.

STEP 9



Remove lower push tab on inner fender well. Repeat on other side.

STEP 10



Remove 10mm bolt connecting bumper to fender. Repeat on other side.

STEP 11

Grip back of bumper and pull forward to access headlight bolts. Repeat on other STEP 14



Pull bumper forward to access side 10mm headlight bolt and remove.

STEP 13



With bumper pulled forward remove inside lower 10 mm headlight bolt.

Remove top two 10mm headlight bolts. Repeat steps 12-14 on other side.

STEP 15

Pull headlight out and disconnect 3 connectors from headlight. Repeat on other side.

STEP 18

STEP 16



For headlights equipped with CCFL-type halos continue with steps. For non-Halo headlights proceed to step 19.



Clean contact surface area with rubbing alcohol or mild soap to remove any dirt and grime.



Peel 3m tape backing off inverter box.

Once location of inverter box is set press
onto surface securely.

STEP 19



Connect 3 connectors from vehicle to Anzo USA headlight and slide light into place.

STEP 20



Reverse steps 2-15 to complete installation. Test all functions before driving.