5150 Eucalyptus Avenue Unit A
Chino, Ca. 91710
888.360.3696
www.anzousa.com

Installation Manual:

Part Number: 861139
Tail Gate Spoiler Lights
Chevy Silverado (99 & 07)

STOP

Completely read all the instructions before installation
Improper installation will void warranty!

Step 1

Tools needed:
Torx Wrench
Phillips Screw Driver
Plastic Pin Remover
Wire Splice Connector

Step 2

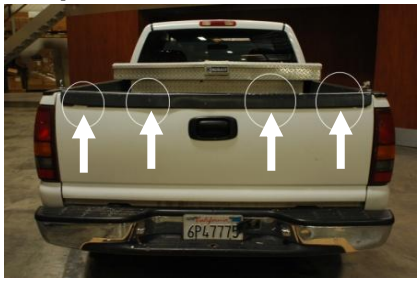

Remove the tail gate spoiler by removing the four phillips screws

Step 3

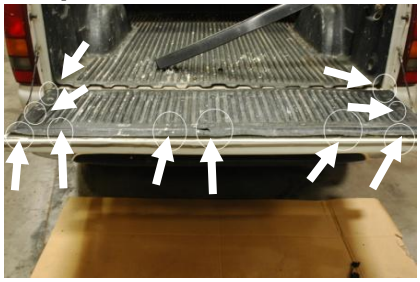

Remove the tail gate bed liner by removing the four phillips screws, four plastic pins, and two torx screws from the tail gate bed liner

Step 4

Install the Anzo tail gate spoiler lights by reversing the step 2B

Step 5

Run the power source along the tail gate bed liner

Step 6

Install the tail gate bed liner by reversing step 3

Step 7

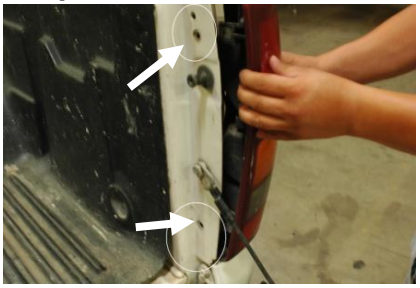

Remove one of the tail lights by removing the two phillips screws

Step 8

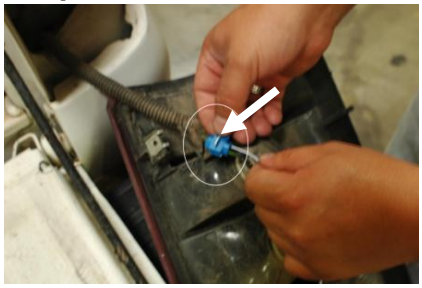

Connect the white reverse light wire from the Anzo tail gate spoiler to the red reverse wire from the tail light using the wire splice connector

Step 9

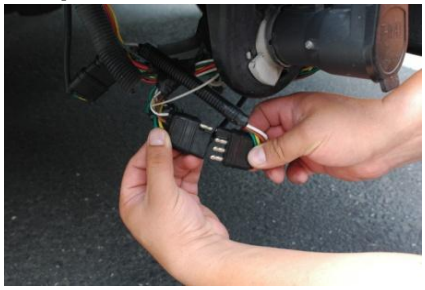

Connect the Anzo tail gate spoiler light power source to the hitching trailor power outlet located directly below the vehicle

Step 10

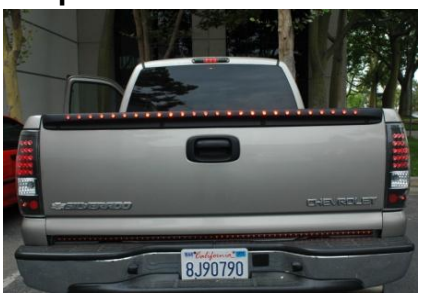

Test all functions before operating the vehicle

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.

© 2008 AnzoUSA™. All rights reserved.